

Mec

### **Operator's Manual**

Specifications i	inside cover
Introduction	1
Safety	2
Safety Alert Symbols	3
Electrocution Hazard	4
Tip-over Hazards	5
Fall Hazards	
Collision Hazards	6
Additional Safety Hazards	7
Battery Safety	7
Controls & Components	
Platform Controls	
Base Controls	
Component Locations	
Workplace Inspection	
Operating Instructions & Function Tests	
Prestart	
Starting Engine from Base Controls	
Starting Engine from Platform Controls	
Base Controls Operation and Test	
Platform Control Operation and Test	
Shutdown Procedure	
Emergency Lowering System	
Fold Down Platform Railings	
Platform Capacity & Material Loading	
Machine Inspections and Maintenance	
Using The Maintenance Chock	
Pre-Start Inspection Checklist	
Frequent Inspection Checklist	
Annual Inspection Report	
Maintenance	
Routine Maintenance	
Frequent and Annual Maintenance	
Lubrication	
Troubleshooting	
Warning and Instructional Decals	
Transport and Lifting Instructions	
Loading	
Driving or Winching onto or off of a Transport Vehicle	
Securing to Truck or Trailer for Transport	
Lifting Instructions	48

Multiple patents pending.

#### -Specifications-

TITAN Boom™ 4	0-S			
Working Height*	46 ft	14.2 m		
Platform Height	40 ft	12.2 m	-	
Maximum Drive Height	30 ft	9.1 m		
Maximum Forward Reach w/ Stabilizers	26 ft 6 in	8 m		
Machine Weight** (Unloaded)	24250 lb	11000 kg	_	
Lift Capacity Total	4000 lb	1800 kg	_	
Load Zone	3000 lb	1350 kg	-	
Personnel & Tools Evenly Distributed	1000 lb	450 kg	-	
Maximum Occupants		4	_	
Stowed Height Rails Up	118 in	3 m	_	
Rails Folded Down	84 in	2.13 m	-	
Overall Length	22 ft 6 in	6.9 m	_	
Overall Width	96 in	2.44 m	-	
Wheel Base	152 in	3.85 m	-	
Wheel Track	82 in	2.08 m	_	
Platform Dimensions Length	22 ft	6.7 m	_	
Platform Width	90 in	2.28 m	-	
Loading Height	72 in	1.83 m	-	
Turning Radius, Inside	8 ft	2.4 m	-	
(4 Wheel Steer) Outside	19 ft	5.8 m	-	
Ground Clearance	19 ft 18 in	46 cm	_	
Lift/Lower Speeds		/ 50 sec	-	
-		/ 30 sec	_	
Extend/Retract Speeds Platform Translation Speed		sec	_	
Drive Speed Stowed		0-6.4 km/h	_	
(Proportional) Raised or extended	0-4 mph 05 mph	0-0.4 km/h	_	
-	-	6/22°	_	
			_	
Stowed, uphill		6/22°	_	
Approach Angle		%/21°	_	
Breakover Angle		%/22°	_	
Platform Rotation		90°, -90°)	_	
Frame Level		ch side		
Maximum Operating Wind Speed	28 mph	12.5 m/sec (45 km/h)	Engine	Kubota V2403-T
Ground Pressure/Wheel (Maximum)	160 psi	11.2 kg/cm <sup>2</sup>	Fuel Type	Diesel
Maximum Wheel Load	9600 lbs	4350 kg	Fuel Capacity	32 gal 120 lite
Tire Size	37 in. od	.94 m od	Alternator	40 amp
Wheel Lug Nut Torque	150 ft/lb	203 Nm	Battery	Two 1000 CCA 12V
Hydraulic Pressure Drive System	4350 psi	300 bar	Noise Level	92 dB @ 1m
Main System	3000 psi	207 bar	Control System	12V DC
Hydraulic Fluid Capacity	40 gal	150 liter	Brakes	4 wheel multi disc
Meets applicable requirements of ANSI A92.5-			1	1
Working Height adds 6 feet (2 m) to platform				
**Weight may increase with certain options	0			

\*\*Weight may increase with certain options.

#### Introduction

This Operator's Manual has been designed to provide you, the owner, user or operator, with the instructions and operating procedures essential to properly and safely operate your MEC Aerial Work Platform for positioning personnel, along with their necessary tools and materials, to overhead work locations.



The Operator's Manual must be read and understood prior to operating your MEC Aerial Work Platform. The user/operator should not accept operating responsibility until he/she has read and understands the operator's manual as well as having operated the MEC Aerial Work Platform under supervision of an authorized, trained and qualified operator.

It is essential that the operator of the aerial work platform is not alone on the workplace during operation.

Modifications of this machine from the original design and specifications without written permission from MEC are strictly forbidden. A modification may compromise the safety of the machine, subjecting operator(s) to serious injury or death.

Your MEC Aerial Work Platform has been designed, built, and tested to provide safe, dependable service. Only authorized, trained and qualified personnel shall be allowed to operate or service the machine.

MEC, as manufacturer, has no direct control over machine application and operation. Proper safety practices are the responsibility of the owner, user and operator.

If there is a question on application and/or operation contact:



#### MEC Aerial Platform Sales Corp.

1401 South Madera Ave • Kerman, CA 93630 USA Ph: 1-877-635-5438 • 559-842-1500 • Fax: 559-842-1522 www.mecawp.com



#### Safety

DO NOT operate this machine until you have read and understood this manual, have performed the Workplace Inspection, Pre-Start Inspection and Routine Maintenance, and have completed all the test operations detailed in the Operating Instructions section.

Failure to read, understand and follow all safety rules, warnings, and instructions could result in serious injury or death. For your safety and the safety of those around you, you must operate your machine as instructed in this manual.

MEC designs aerial work platforms to safely and reliably position personnel, along with their necessary tools and materials, at overhead work locations. The owner/user/operator of the machine should not accept responsibility for the operation of the machine unless properly trained.

ANSI and other applicable standards identify requirements of all parties who may be involved with self-propelled elevating work platforms. The ANSI/SIA A92.5-2006 Manual of Responsibilities is considered a part of this machine and can be found in the manual compartment, located at the platform control station. To ensure safe use of machine, inspections and training specified in ANSI/SIA A92.5-2006 must be performed at designated intervals as prescribed.

#### WARNING

NEVER perform work or inspection on the machine with the platform elevated without first blocking the boom assembly with the Maintenance Chock.

#### **California Proposition 65 Warning**

This product contains chemicals known to the State of California to cause cancer and/or birth defects or other reproductive harm.



#### **Safety Alert Symbols**

MEC manuals and decals use symbols and colors to help you recognize important safety, operation and maintenance information.

	]
	RED – Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
WARNING	ORANGE – Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
CAUTION	YELLOW with alert symbol – Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
CAUTION	YELLOW without alert symbol – Indicates a potentially hazardous situation which, if not avoided, may result in property damage.
NOTICE	GREEN – Indicates operation or maintenance information.
Fall Protect	ion
	Personal fall protection equipment (PFPE) is required when operating this machine.

**INAXIMUM** All PFPE must comply with employer and job site rules and applicable governmental regulations, and must be inspected and used in accordance with the PFPE manufacturer's instructions.

ALWAYS wear approved fall protection, properly attached to an anchor cable, when operating the machine.





#### **Electrocution Hazard**

#### 

#### **ELECTROCUTION HAZARD! THIS MACHINE IS NOT INSULATED!**

DEATH OR SERIOUS INJURY will result from contact with or inadequate clearance from any electrically charged conductor.

You must maintain a CLEARANCE OF AT LEAST 10 FEET (3.05 m) between any part of the machine, or its load, and any electrical line or apparatus carrying over 300 Volts up to 50,000 Volts. One foot (30.5 cm) additional clearance is required for every additional 30,000 Volts.

#### Observe Minimum Safe Approach Distance.

This machine **is not** electrically insulated and **will not** provide protection from contact with or proximity to electrical current.

Maintain safe distances from electrical power lines and apparatus in accordance with applicable government regulations and the following chart:


#### **Minimum Save Approach Distance**

Voltage	Minimum Safe Approach Distance	
Phase to Phase	Feet	Meters
0 to 300 Volts	Avoid 0	Contact
Over 300V to 50kv	10	3.1
Over 50KV to 200KV	15	4.6
Over 200KV to 350KV	20	6.1
Over 350KV to 500KV	25	7.6
Over 500KV to 750KV	35	10.7
Over 750KV to 1000KV	45	13.7

Allow for platform movement, electrical line sway or sag and beware of strong or gusty winds.

Keep away from the machine if it contacts energized power lines. Personnel on the ground or in the platform must not touch or operate the machine until energized power lines are shut off.

Do not use the machine as a ground for welding.

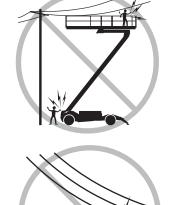

#### **Tip-over Hazards**



DO NOT OVERLOAD



DO NOT DRIVE ON IRREGULAR OR UNSTABLE SURFACE



DO NOT PUSH OR PULL OBJECTS OUTSIDE PLATFORM



DO NOT ELEVATE IN WINDY CONDITIONS



DO NOT exceed the maximum platform capacity (See *Platform Capacity & Material Loading* on page 33). The weight of options and accessories will reduce the rated platform capacity and must be factored into the total platform load. Refer to the decals on the options.

DO NOT elevate the platform when the machine is on a surface that is soft and / or on a slope.

STOP if the alarm sounds and the red light illuminates when the platform is raised. Use extreme caution to lower the platform.

 
**Driving:** DO NOT drive the machine on a slope that exceeds the maximum uphill or downhill slope rating. Slope rating applies to machines in the stowed position.

**Driving in stowed position:** use extreme care and reduce speed when driving across uneven terrain, debris, unstable or slippery surfaces, and near holes or drop-offs.

**Driving with the platform elevated:** DO NOT drive on or near uneven terrain, unstable surfaces, curbs, drop-offs or other hazardous conditions.

DO NOT push off or pull toward any object outside the platform.

Maximum Allowable Side Force



DO NOT elevate the platform when wind speeds are in excess of 28 m.p.h. (12.5 m/s). If wind speeds exceed 28 m.p.h. (12.5 m/s) when the platform is elevated, carefully lower the platform and discontinue operation.

DO NOT increase the surface area of the platform (i.e. cover the rails with tarp or plywood). Increased surface area exposed to the wind will decrease machine stability.

DO NOT attach overhanging loads or use the machine as a crane.

NEVER transport tools and materials unless they are firmly secured. Secure all tools and loose materials.

NEVER alter or disable any machine components.

NEVER replace any part of the machine with items of different weight or specification.

NEVER modify or alter the work platform without written permission from MEC.

NEVER place ladders or scaffolds in the platform or against any part of the machine.

NEVER use the machine on a moving or mobile surface or vehicle.

Ensure that all tires are in good condition and lug nuts are properly torqued.





DO NOT CLIMB ON RAILS



DO NOT EXIT PLATFORM WHEN ELEVATED

#### **Collision Hazards**



DO NOT sit, stand or climb on the platform guard rails. Maintain a firm footing on the platform floor at all times.

DO NOT exit the platform when elevated

Keep the platform floor clear of debris.

DO NOT fasten a fall restraint lanyard to an adjacent structure.

Ensure that all gates are properly closed and secured before operating the machine.

Operators must comply with employer and job site rules and governmental regulations regarding the use of personal protective equipment.

Check path before moving for equipment, materials or other obstructions.

Check path before moving for overhead obstructions.

Check path before moving for crushing hazards when holding the platform rail.

Reduce travel speed when moving the machine on slopes, when near personnel and obstacles, or when surface conditions are wet, slippery or otherwise limiting.

DO NOT operate in the path of any crane unless the controls of the crane have been locked out and/or precautions have been taken to prevent any possible collision.

Stunt driving and horseplay are PROHIBITTED.

Watch for personnel and obstructions below the platform when lowering the platform.

#### **Additional Safety Hazards**

#### **Explosion and Fire Hazards**

DO NOT operate the machine in hazardous locations or locations where potentially flammable or explosive gasses or particles may be present.

#### **Damaged Machine Hazards**

Conduct a thorough pre-start inspection of the machine and test all functions before each work shift to check for damage, malfunction and unauthorized modification. Tag and remove a damaged, malfunctioning or modified machine from service. DO NOT use a damaged, malfunctioning or modified machine.

Routine maintenance must be performed by the operator before each work shift. Scheduled maintenance must be performed by a qualified service technician at scheduled intervals. Tag and remove from service any machine that has not had scheduled preventative maintenance performed.

Check that all safety and instructional decals are in place and undamaged.

Check that the operator's, safety and responsibilities manuals are present in the storage container located in the platform. All manuals must be complete, undamaged and readable.

#### **Bodily Injury Hazards**

DO NOT operate the machine when there is a hydraulic fluid or air leak. Hydraulic fluid or air under pressure can penetrate and/or burn skin.

All compartments must remain closed and secure during machine operation. Improper contact with components under any cover will cause serious injury. Only trained maintenance personnel should access compartments. The operator should only access a compartment when performing pre-operation inspection.

#### Weld Line to Platform Safety (if equipped)

Read, understand and follow all warnings and instructions provided with the welding power unit.

Do not connect weld leads or cables unless the welding power unit is turned off at the platform controls.

DO NOT operate unless the weld cables are properly connected.


DO NOT connect the ground lead to the platform.

#### **Battery Safety**

Burn Hazards	
	Batteries contain acid. Always wear protective clothing and eye wear when working with batteries.
	Avoid spilling or contacting battery acid. Neutralize battery acid spills with baking soda ar water.
Explosion Hazard	
	Keep sparks, flame and lighted tobacco away from batteries. Batteries emit explosive gas.
Electrocution Hazard	
	Avoid contact with electrical terminals.

#### **Controls & Components**

#### **Platform Controls**

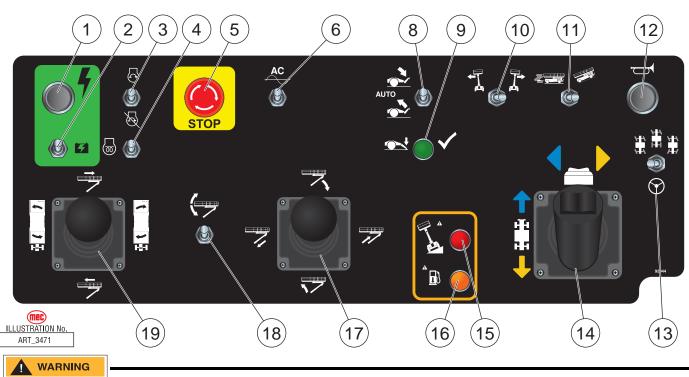


ALWAYS be aware of the machine's position and of your surroundings before activating any control function.

	CONTROL	DESCRIPTION
1	Function Enable Button	Press and hold this button to enable boom, platform, frame level and stabilizer operations.
2	Auxiliary Power	If normal power fails, press and hold while using boom retract and boom lower functions.
3	Start/Stop Switch	Move this switch up to start engine. Press this switch down to stop engine.
4	Glow Switch	Move this switch up to activate glow plugs prior to cold starting the engine.
5	Emergency Stop Switch	Press the EMERGENCY STOP switch at any time to stop all machine functions. Turn switch <i>clockwise</i> to reset
6	Generator Switch (Optional Equipment)	Turn switch ON to engage optional AC generator. Generator switches off in any other function is enabled.
7		
8	Stabilizer Switch	Move and hold this switch down until stabilizer deployment stops automatically. Move and hold this switch up to retract stabilizers.
9	Stabilizers Set Indicator Light	Green light illuminates when the stabilizers are fully deployed and the full range of boom functions are enabled.
10	Frame Level Switch	Move this switch left or right to manually adjust the level position of the frame.
11	Speed/Torque Switch	Move this switch to the left for high speed drive. Push this switch to the right for high torque drive.
12	Horn Button	Press to sound warning horn.

	CONTROL	DESCRIPTION	
13	Steering Mode Switch	Use this switch to set the steering mode: Left position: Crab Steer All four wheel turn in the same direction. Center position: 2-Wheel Steer Only the front two wheels steer. Right position: 4-Wheel Steer The front and rear wheels steer in opposite directions.	
14	Drive/Steer Control Lever	Depending on the placement of the control box and the orientation of the platform, the machine may move in unexpected directions when the Drive and Steer functions are activated. The color- and shape-coded arrows on the joystick decal correspond to similar arrow decals on the machine chassis. Be sure to check the arrows on the chassis before using the Drive or Steer functions.	
		Drive Function	Push the control lever forward or backward to drive the machine.
		Steer Function	Press the thumb switch on top of the control lever to steer left or right.
15	Tilt Indicator Light		uminated, the machine is not level. Carefully retract the boom, then lower the ng the machine, or move the machine to a firm, level surface.
16	Low Fuel Indicator Light	If this amber light is	illuminated, the fuel level is low. Refuel soon.
17	Boom Function Control Lever	Boom Lift/Lower Function	Depress the enable button on top of the control lever, then pull the joystick backward to lift the boom. Depress the enable button on top of the control lever, then push the joystick forward to lower the boom.
		Boom Extend/Retract Function	Depress the enable button on top of the control lever, then push the control lever right to extend the boom. Depress the enable button on top of the control lever, then push the control lever left to retract the boom.
18	Platform Level Switch	Press this switch up to manually level the rear of the platform upward. Press this switch down to manually level the rear of the platform downward.	
19	Platform Function Control Lever	Platform Slide Forward/Rearward Function	Press the enable button on top of the control lever, then push the control lever forward to slide the platform forward along the platform support beam. Press the enable button on top of the control lever, then pull the control lever backward to slide the platform rearward along the platform support beam.
		Platform Rotate Function	Press the enable button on top of the control lever, then push the control lever left to rotate the platform counterclockwise. Press the enable button on top of the control lever, then push the control lever right to rotate the platform clockwise.
			The Platform Rotate function will stop when the platform reaches its detent center position. To continue to rotate the platform, return the joystick to the neutral position, then push the joystick to rotate the platform in the desired direction.


#### **Base Controls**

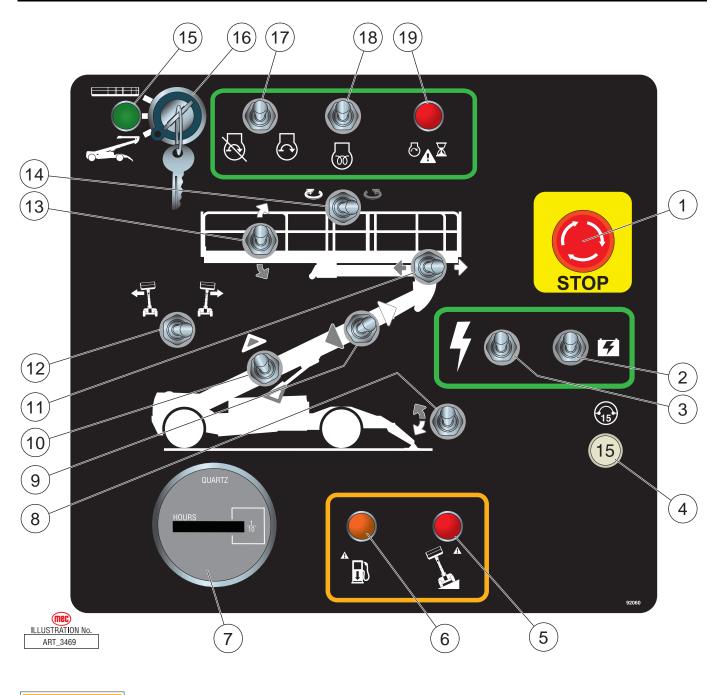

ALWAYS be aware of the machine's position and of your surroundings before activating any control function.

	CONTROL	DESCRIPTION			
1	Emergency Stop Switch	Press the EMERGENCY STOP switch at any time to stop all machine functions. Turn switch <i>clockwise</i> to reset			
2	Auxiliary Power Switch	If normal power fails, press and hold while using boom retract and boom lower functions.			
3	Function Enable Switch	Press and hold this switch to enable boom, platform, frame level and stabilizer operations. Press down to operate the controls at slow speed. Press up to operate the controls at higher speed.			
4	Circuit Breaker	Trips when there	is excessive electrical load. Push to reset.		
5	Tilt Indicator Light		ght is illuminated, the machine is not level. Carefully retract the boom, then lower the eling the machine, or move the machine to a firm, level surface.		
6	Low Fuel Indicator Light	When this ambe	r light is illuminated, the fuel level is low. Refuel soon.		
7	Hour Meter	Indicates total el	apsed time of machine operation.		
8	Stabilizer Switch		lown until automatic stabilizer deployment stops automatically. Ip to retract stabilizers.		
9	Boom Extend/Retract		Move this switch right to extend the boom. Move this switch left to retract the boom.		
10	Boom Lift/Lower	Move this switch up to lift the boom. Move this switch down to lower the boom.			
11	Platform Slide Forward/Rearward	Move this switch right to move the platform forward along the platform support beam. Move this switch left to move the platform rearward along the platform support beam.			
12	Frame Level Switch	Move this switch left to manually adjust the level position of the frame to the left. Move this switch right to manually adjust the level position of the frame to the right.			
13	Platform Level Switch	Move this switch up to manually level the rear of the platform upward. Move this switch down to manually level the rear of the platform downward.			
14	Platform Rotate Switch	Move this switch left to rotate the platform clockwise. Move this switch right to rotate the platform counterclockwise.			
		The Platform Rotate function will stop when the platform reaches its detent center position. To continue to rotate the platform, return the switch to the neutral position, then push the switch to rotate the platform in the desired direction.			
15	Power On Indicator Light	When this green light is illuminated, the Selector Switch (#16) is set to either platform or chassis. This light is not illuminated when the key is turned to the center (off) position.			
16	Selector Switch	PLATFORM Select to operate from the platform control panel.			
		BASE	Select to operate from the base control panel.		
		OFF	Select to stop operation from either control panel.		
17	Start/Stop Switch	Push switch up to start engine. Push switch down to stop engine.			
18	Glow Switch	Press this switch	up to activate glow plugs prior to starting.		
19	Starter Time-out Indicator	When this red light is illuminated, the starter circuit is temporarily disabled. The starter circuit times out if the starter is run continuously for 15 seconds without the engine starting. The starter functions resets after 30 seconds.			

#### **Component Locations**

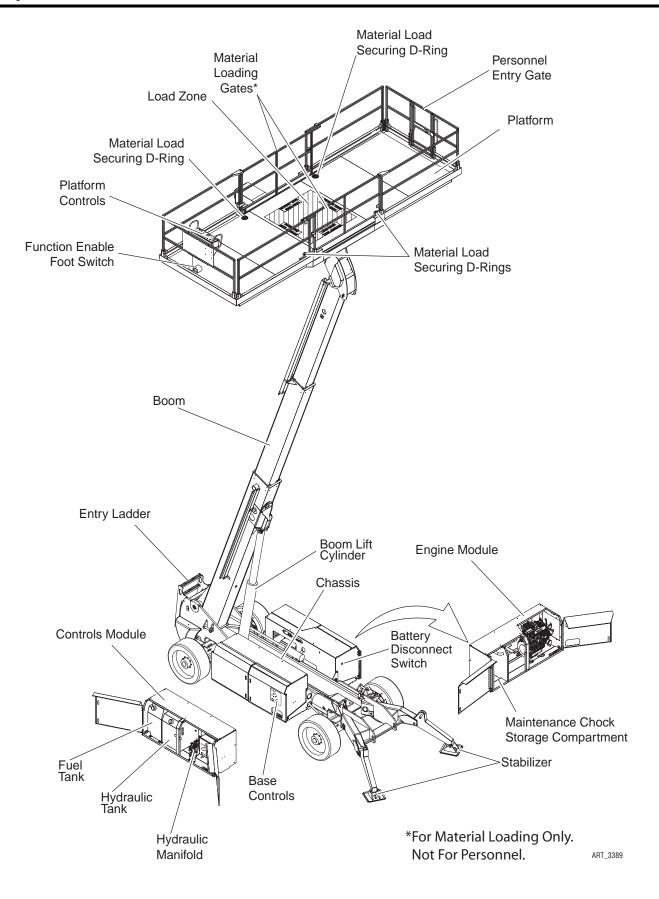

#### **Workplace Inspection**

DO NOT operate this machine until you have read and understood this manual, have performed the Workplace Inspection, Pre-Start Inspection and Routine Maintenance, and have completed all the test operations detailed in the Operating Instructions section.

Inspect the workplace and determine whether the workplace is suitable for safe machine operation. Do this before moving the machine to the workplace.

Be sure the lift is the correct machine for the job.

Be aware of workplace conditions, and continue to watch for hazards while operating the machine.

#### **Workplace Inspection**

Before operating the machine, check the workplace for all possible hazards, including but not limited to:

- drop-offs or holes, including those concealed by water, ice, mud, etc.
- sloped, unstable or slippery surfaces
- bumps, surface obstructions and debris
- overhead obstructions and electrical conductors
- other objects or equipment
- · hazardous locations and atmospheres
- inadequate surface and support to withstand all load forces imposed by the machine
- wind and weather conditions
- the presence of unauthorized personnel
- other possible unsafe conditions

#### **Operating Instructions & Function Tests**

DO NOT operate this machine until you have read and understood this manual, have performed the Workplace Inspection, Pre-Start Inspection and Routine Maintenance, and have completed all the test operations detailed in the Operating Instructions section.

This section provides instructions and tests for each function of machine operation. Follow all safety rules and instructions. The operator must conduct inspections and a Functions Test of the machine before each work shift to check that all machine systems are working properly.

Test the machine on a firm level surface with no debris, drop-offs, potholes or overhead obstructions. Perform each step outlined in this section.

This machine shall only be operated by trained and authorized personnel. If multiple operators use this machine, all must be trained, qualified and authorized to use it. New operators must perform a Pre-Start Inspection and Functions Test prior to operating the machine.

Operators must comply with all employer and job site rules and governmental regulations regarding the use of personal protective equipment – see *Fall Protection* on page 3.

DO NOT use a machine that is malfunctioning. If any function does not perform as described, tag the machine and remove for repair by a qualified service technician. After repairs are completed, a Pre-Start Inspection and Functions Test must be performed before using the machine.

• Perform Prestart Inspection (see page 36).

#### Prestart



• Check Emergency Stop Switches at both the base and platform controls – turn clockwise to reset.



ART\_3353



• Check Battery Disconnect Switch outside the front end of the Engine Module. Must be in ON position.

#### **Starting Engine from Base Controls**

Be sure that the upper and lower EMERGENCY STOP Switches are reset.

• Lower Control Box: Turn Key Switch to CHASSIS.



ART\_3345



ART\_3344



ART\_3343



starts.

• Cold Start: Move and hold the Glow Switch up as indicated in the Preheat table.

• Move the Start/Stop switch to the right to start. Release the switch when the engine

- With the Glow switch held up, press and hold the Start/Stop switch to the right until the engine starts.
- Release both switches once the engine starts.

#### **Preheat Table**

Ambient Temperature	Preheat Time	
Above 50°F (10°C)	5 Seconds	
50°F to 23°F (10°C to -5°C)	10 Seconds	
Below 50°F (-5°C)	20 Seconds	
20 Seconds = Limit of Continuous Use		

• To protect the starter motor, power will cut off to the starter circuit when the starter motor has run continuously for 15 seconds without starting the engine. The Starter Circuit Cutout indicator light will turn on and power to the starter circuit will cut out for 30 seconds.



ART\_3342



#### **Starting Engine from Platform Controls**



ART\_3371



ART\_3355



ART\_3357

• Lower Control Box: Turn the Key Switch to PLATFORM.

• **Platform Control Box:** Move the Start/Stop switch UP to start. Release the switch when the engine starts.

- Cold Start: Move and hold the Glow Switch up as indicated in the Preheat table.
- With the Glow switch held up, press and hold the Start/Stop switch UP until the engine starts.
- Release both switches once the engine starts.


#### **Preheat Table**

Ambient Temperature	Preheat Time	
Above 50°F (10°C)	5 Seconds	
50°F to 23°F (10°C to –5°C)	10 Seconds	
Below 50°F (-5°C)	20 Seconds	
20 Seconds = Limit of Continuous Use		

• To protect the starter motor, power will cut off to the starter circuit when the starter motor has run continuously for 15 seconds without starting the engine. The Starter Circuit Cutout indicator light will turn on at the Base Control panel and power to the starter circuit will cut out for 30 seconds.



#### **Base Controls Operation and Test**

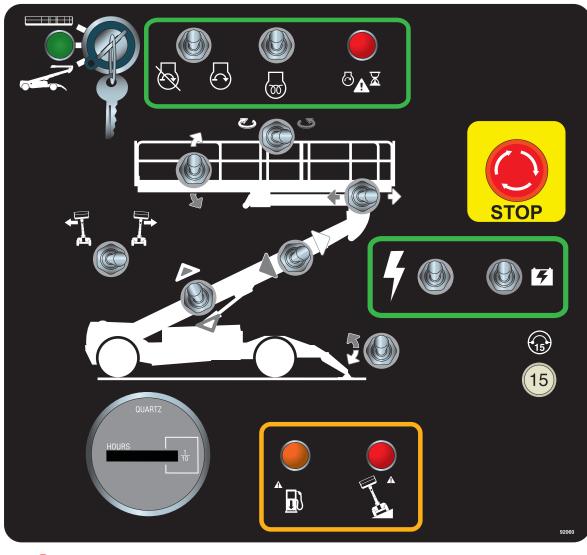



Check the area above and around the machine for obstructions before operating the machine. The machine must have space to allow full elevation of platform and full horizontal extension of the boom.

#### TITAN Boom<sup>™</sup> 40-S



ART\_3353



ART\_3345



ART\_3339

#### **Emergency Stop**

- Press the Emergency Stop Switch at any time to stop all machine functions.
- Turn switch *clockwise* to reset.


#### **Select BASE Operation**

• Turn the Selector Key Switch to BASE.

#### **Function Enable**

- Press and hold this switch to enable and operate machine functions from the base controls.
- Press down to operate the controls at slow speed.
- Press up to operate the controls at higher speed.
- Releasing this switch will disable machine functions.

Do not elevate the platform if the machine is not on a firm level surface.

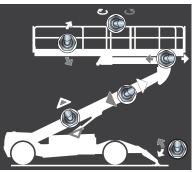

ART\_3369



ART\_3347

#### **Base Control Boom/Platform Functions**

#### **Stabilizer Deploy/Retract**

- Move and hold the Stabilizer Deploy/Retract switch down to deploy the stabilizers. Continue to hold the switch down until the stabilizers automatically stop.
- **Note:** Stabilizer deployment first automatically levels the frame, then deploys the stabilizers.

#### **Test Operation**

- Press and hold the Function Enable switch.
- Hold switch down until stabilizer deployment stops.
- Releasing the button will stop deployment.
- Pressing the Emergency Stop Switch will stop deployment.



ART\_3349

#### **Boom Extend/Retract**

When the Stabilizers are not deployed, the Boom Extend function will cut off after extending approximately 8.5 feet (2.6 m).

• Move and hold the Extend/Retract switch on the base control panel to extend or retract the boom.

#### **Test Operation**

- Press and hold the Function Enable switch.
- Retract stabilizers. Extend boom until it stops. Extension should stop after approximately 8.5 feet (2.6 m).
- Retract the boom completely. Deploy stabilizers.
- Extend boom until it stops. Boom should extend to maximum length.
- Retract the boom until it stops. Boom should retract to minimum length.
- Releasing the switch will stop boom extension or retraction.
- Pressing the Emergency Stop Switch will stop boom extension or retraction.



ART\_3348



ART\_3350



ART\_3351

#### **Boom Lift/Lower**

• Press and hold the Boom Lift/Lower switch on the base control panel to lift or lower the boom.

#### **Test Operation**

- Press and hold the Function Enable switch.
- Raise the boom until it stops. Boom should lift to full height.
- Lower the boom until it stops. Boom should rest on the chassis.
- Releasing the switch will stop Boom Lift/Lower function.
- Pressing the Emergency Stop Switch will stop boom lift/lower function.

#### **Platform Level**

The platform will automatically level as the boom is lifted or lowered. The Platform Level function allows manual level adjustment of the platform.

- Press and hold the Platform Level switch on the base control panel to manually adjust the level of the platform.
- Platform Level power is disabled upon exceeding 5° out of level. Power is allowed only to the direction that returns the platform toward level.

#### **Test Operation**

- Press and hold the Function Enable switch.
- Push the switch up and down. The platform level should change accordingly.
- Releasing the switch will stop platform level function.
- Pressing the Emergency Stop Switch will stop platform level function.

#### **Platform Rotate**

• Press and hold the Platform Rotate switch on the base control panel to rotate the platform.

#### **Test Operation**

- Press and hold the Function Enable switch.
- Push the switch left and right. The platform should rotate accordingly.
- Releasing the switch will stop platform rotate function.
- Pressing the Emergency Stop Switch will stop platform rotate function
  - **Note:** The Platform Rotate function will stop when the platform reaches its detent center position. To continue to rotate the platform, return the switch to the neutral position, then push the switch to rotate the platform in the desired direction.









ART\_3354





ART\_3337

#### Platform Slide Forward/Reverse

• Press and hold the Platform Slide switch on the base control panel to slide the platform along the platform support beam.

#### **Test Operation**

- Press and hold the Function Enable switch.
- Push the switch left and right. The platform should move along the platform support beam accordingly.
- Releasing the switch will stop Platform Slide function.
- Pressing the Emergency Stop Switch will stop Platform Slide function.

#### **Chassis Level Switch**

Use this control to manually change the level of the chassis. This function is disabled when the boom is elevated.

Note: This function is performed automatically when deploying the stabilizers.

#### **Test Operation**

- Press and hold the Function Enable switch.
- Push the switch left or right. The chassis of the machine will move in the direction the switch is pushed.

#### **Tilt Indicator Light**

Light ON and alarm sounding indicates an unsafe condition.

• STOP. The machine is not level. Carefully retract the boom, then lower the boom. Level the machine, or move the machine to a firm, level surface.

#### **Low Fuel Indicator Light**


Light ON indicates a low-fuel alert condition.

• Refuel soon.



#### **Platform Control Operation and Test**

#### **Entering The Platform**

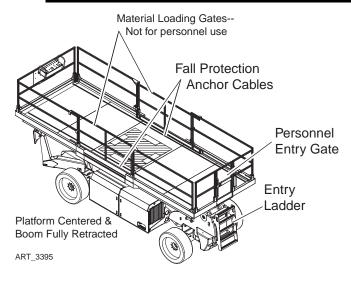

Personnel shall enter and exit the platform only at the Personnel Entry Gate, and only when:

• The boom is fully retracted using the Boom Extend/Retract function, and

• The platform is centered using the Platform Rotate function.

**Note:** The Platform Rotate function will stop when the platform reaches its center position. To continue to rotate the platform, return the joystick to the neutral position, then push the joystick to rotate the platform in the desired direction.

The Personnel Entry Gate is spring-loaded and latches itself when released. Check that it is securely closed and latched before operation.

#### **Fall Protection**


## Maximum 4 Occurrences

Personal fall protection equipment (PFPE) is required when operating this machine.

All PFPE must comply with employer and job site rules and applicable governmental regulations, and must be inspected and used in accordance with the PFPE manufacturer's instructions.

ALWAYS wear approved fall protection, properly attached to an anchor cable, when operating the machine.

#### **Platform Control Panel**

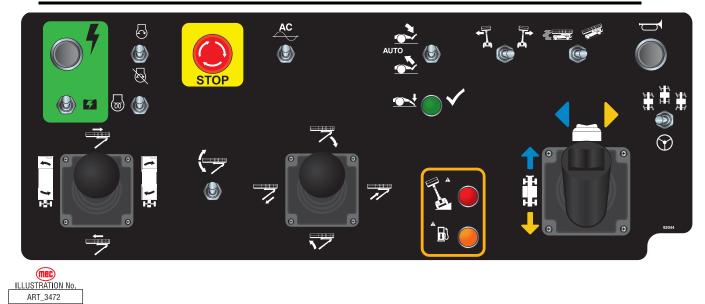


**IMPORTANT**—Before moving, check that the route of travel to be taken is clear of persons, obstructions, debris, holes, and drop offs, and is capable of supporting the machine.

#### **Function Enable At Platform Controls**

There are separate Function Enable features for drive/steering and lift functions.

#### **Drive Function Enable**

Drive and steer functions are enabled by squeezing the trigger at the front of the drive control handle.

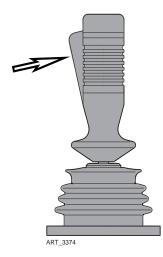



# ATL 3356

#### Lift Function Enable

Lift functions (all boom, platform, chassis level and stabilizer operations) are enabled by pressing and holding the button on top of either the Boom or Platform control levers, or the green Enable button at the top left of the Platform Control Station. This allows the use of multiple boom and platform functions if desired.

#### **Platform Operations Test**



#### **Emergency Stop**

- Press the EMERGENCY STOP switch at any time to stop all machine functions.
- Turn switch *clockwise* to reset.

ART\_3353



Activation of the EMERGENCY STOP switch will apply brakes immediately. This may cause unexpected platform movement as the machine comes to a sudden stop. Brace yourself and secure objects on the platform during operation of machine.



#### Select PLATFORM Operation

• Base Controls: Turn the selector switch to PLATFORM.

#### ART\_3371



ART\_3355

#### **Operate from Platform**

- Enter the platform through the personnel entry gate. Close and secure the entry.
- Press the Start/Stop switch UP to start. Release the switch when the engine starts.

#### TITAN Boom<sup>™</sup> 40-S

đ

ART\_3359



ART\_3363b

#### **Tilt Indicator Light**

Light ON and alarm sounding indicates an unsafe condition.

• Press the Horn Button to verify proper operation.

• STOP. The machine is not level. Carefully retract the boom, then lower the boom. Level the machine, or move the machine to a firm, level surface.

#### Low Fuel Indicator Light

Light ON indicates a low-fuel alert condition.

Refuel soon.



ART\_3363



#### **Drive Control Lever Operation**



ART\_3366

Depending on the placement of the control box and the orientation of the platform, the machine may move in unexpected directions when the Drive and Steer functions are activated. The color- and shape-coded arrows on the joystick decal correspond to similar arrow decals on the machine chassis. Be sure to check the arrows on the chassis before using the Drive or Steer functions.

- Drive Function speed is proportional and is controlled by the positional of the control lever. The further it is moved from the neutral (center) position, the faster the speed will be.
- When the boom is elevated beyond an 8° angle or extended beyond 8 inches (0.2 m), the maximum drive speed is reduced to 0.5 mph (0.8 km/h). Drive function speed is still fully proportional to the position of the drive control handle.
- The control lever returns to the neutral (center) position when released.
- Steering Function is not proportional.

#### **Test Operation**

- Drive: Squeeze the enable trigger, then move the control lever in the desired direction of movement. The further it is moved from the neutral (center) position, the faster the speed will be.
- Stop: Return the control lever to the neutral (center) position. Releasing the control lever will also stop the machine.
- Extend the boom approximately 3 feet (1 m), then drive the machine. Speed should be reduced significantly from the fully-retracted, fully-lowered speed. Retract the boom.
- Elevate the boom approximately 15°, then drive the machine. Speed should be reduced significantly from the fully-retracted, fully-lowered speed. Lower the boom.
- Steering: Squeeze the enable trigger, then press the thumb switch on top of the control lever to steer in the desired direction.



ART\_3362

#### **Steering Mode**

Three steering modes are available: Crab Steer, 2-Wheel Steer and 4-Wheel Steer.

To return to 2-Wheel steering after using the Crab Steer or 4-Wheel Steer modes, center the rear wheels, then switch to 2-wheel steer mode.

#### **Test Operation**

- Set Steering mode to the left position: Crab Steer. Squeeze the enable trigger, then press the thumb switch on top of the control lever. All four wheels should turn in the same direction. Return the wheels to the centered position.
- Set Steering mode to the center position: 2-Wheel Steer. Squeeze the enable trigger, then press the thumb switch on top of the control lever. Only the front two wheels should turn. Return the wheels to the centered position.
- Set Steering mode to the right position: 4-Wheel Steer. Squeeze the enable trigger, then press the thumb switch on top of the control lever. The front and rear wheels should turn in opposite directions. Return the wheels to the centered position.

#### **Boom & Platform Functions**



ART\_3361



ART\_3474



ART\_3354

#### Stabilizer Deploy/Retract

- Press and hold the Stabilizer Deploy/Retract switch to deploy the stabilizers. Continue to hold the switch down until the stabilizers automatically stop and the green indicator light illuminates.
  - **Note:** Stabilizer deployment first automatically levels the frame, then deploys the stabilizers.
  - **Note:** Be sure the stabilizers are fully retracted before driving.

#### **Test Operation**

- Press and hold the Function Enable button.
- Continue to hold switch down until stabilizer deployment stops.
- The green Stabilizers Set indicator light will illuminate on the Platform Control box when the stabilizers are fully deployed. This indicates that full boom extension is enabled.
- Releasing the button will stop deployment.
- Pressing the Emergency Stop Switch will stop deployment.

#### **Chassis Level Switch**


Use this control to manually change the level of the chassis. This function is cut out when the boom is elevated.

**Note:** This function is performed automatically when deploying the stabilizers.

#### **Test Operation**

- Press and hold the Function Enable button.
- Push the switch left or right. The chassis of the machine will move in the direction the switch is pushed.



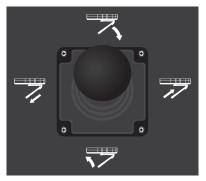

ART\_3370



ART\_3364

#### **Boom Functions Control Lever**

This control lever controls the Boom Extend/Retract and the Boom Lift/Lower functions. The control lever is fully proportional for both functions.

These functions may be enabled by pressing the button on top of the control lever.

When the stabilizers are not deployed, boom extension is limited to approximately 8.5 ft. (2.6 m). Deploying the stabilizers allows the machine to reach full extension and elevation.

#### **Test Operation**

To test the Boom Extend/Retract function; Extension cutout function:

- With the stabilizers retracted, press and hold the Function Enable button.
- Push and hold the joystick to the right until the boom stops extending. The boom should extend approximately 8.5 ft. (2.6 m), then stop.
- Push and hold the joystick to the left to retract the boom completely.
- Deploy the stabilizers.
- Push and hold the joystick to the right until the boom reaches full extension.
- Push and hold the joystick to the left to retract the boom.

To test the Boom Lift/Lower function:

- Press and hold the Function Enable button.
- Pull the joystick back to lift the boom. Lift the boom completely.
- Push the joystick forward to lower the boom. Lower the boom to its stowed position.

#### **Platform Level Switch**

The Platform Level switch manually adjusts the angle of the platform support beam.


#### **Test Operation**

The Platform Level function is controlled automatically as the boom is raised and lowered. To manually level the platform:

- Press and hold the Function Enable button.
- Push the Platform Level switch up or down to adjust the position of the platform.
- Platform Level power is disabled upon exceeding 5° out of level. Power is allowed only to the direction that returns the platform toward level.



#### TITAN Boom<sup>™</sup> 40-S

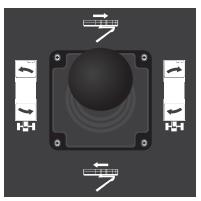

ART\_3365

#### **Platform Functions Control Lever**

The Platform Functions control lever controls the Platform Slide Forward/Reverse and Platform Rotate functions. The control lever is fully proportional for both functions. These functions may be enabled by pressing the button on top of the control lever.

#### **Test Operation**

To test the Platform Slide Forward/Reverse function:

- Press and hold the Function Enable button.
- Push the control lever up to slide the platform forward.
- Push the control lever down to slide the platform rearward.

To test the Platform Rotate function:

- Press and hold the Function Enable button.
- Push the control lever left to turn the platform counterclockwise.
- Push the control lever right to turn the platform clockwise.
  - **Note:** The Platform Rotate function will stop when the platform reaches its center position. To continue to rotate the platform, return the joystick to the neutral position, then push the joystick to rotate the platform in the desired direction.

#### Shutdown Procedure



ART\_3375



- When finished with the machine, place the platform in the stowed position.
- Park the machine on a level surface.
- Turn the Selector Key Switch to the OFF position and remove the key to prevent unauthorized use.
- Carefully exit the platform using a constant three (3) point dismount/grip.
- Turn the Battery Disconnect Switch to the OFF position.

**Note:** Leaving the Battery Disconnect Switch in the ON position for an extended time will drain the battery.

- Always put the switch in OFF position when leaving the machine at the end of the work day.
- Put a padlock on the Battery Disconnect Switch to prevent unauthorized operation.




#### **Emergency Lowering System**

#### 

If the control system fails while the platform is elevated, use the emergency lowering procedure to safely lower the platform.

Do not climb down the boom assembly or exit the platform.

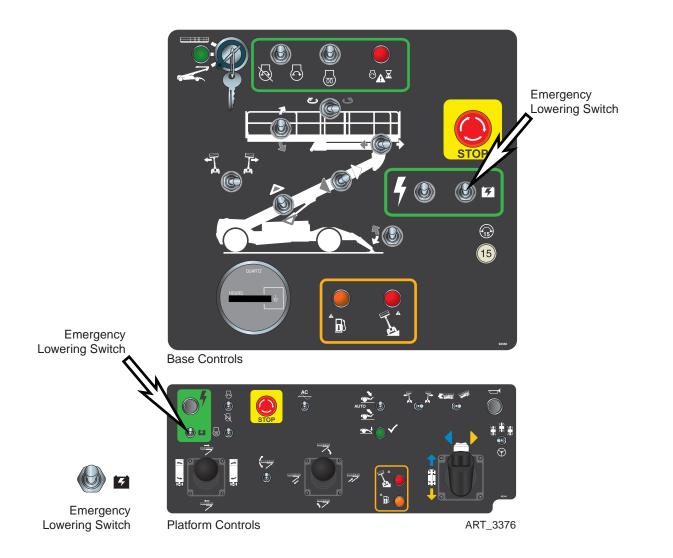


The Emergency Lowering System is used to lower the platform in case of power failure. To lower the platform, activate the Emergency Power Switch to run the Emergency Down auxiliary hydraulic pump.


This function uses battery power from the auxiliary battery to lower the platform.

- Push and hold the Auxiliary Power switch, then use the Boom Extend/Retract function to retract the boom.
- Continue to hold the Auxiliary Power switch, then use the Boom Lift/Lower function to lower the boom.
  - Note: The Emergency Lowering System is disabled when the engine is running.
  - **Note:** The Emergency Power switch serves as an enable switch. It is not necessary to use the primary function enable switch.

#### **Fold Down Platform Railings**

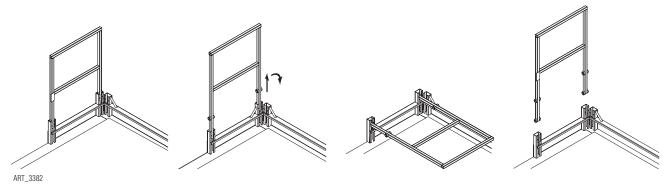

The TITAN Boom<sup>™</sup> uses a pinless guard rail system. After removing the loading gates, lift the guard rail section and pivot to stow, or lift further to remove the rail.

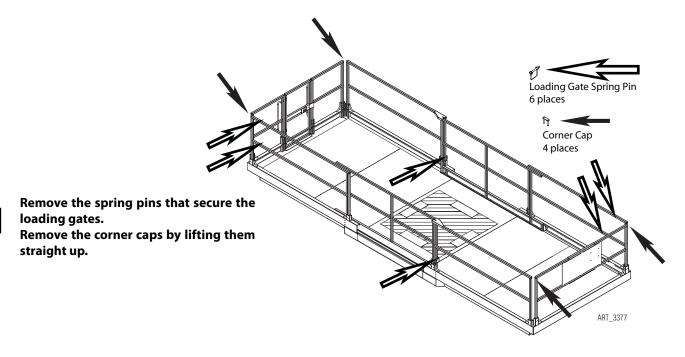


Slide the loading gates away from the load area, then pivot away from the guard rails. Lay the gates in the front section of the platform.

continued...



ART\_3378

#### Fold Down Rails (continued)

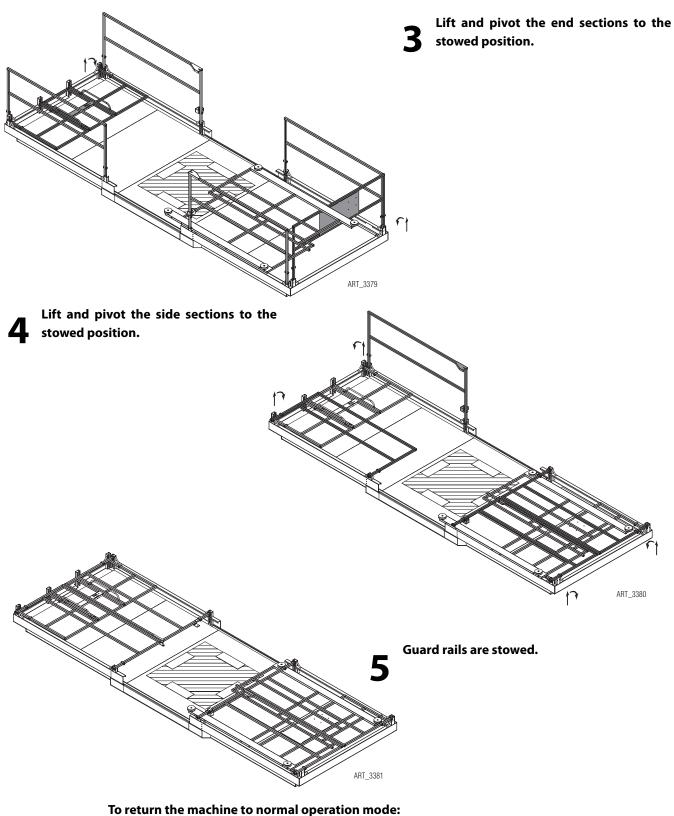

• Lift all rails into their upright position, then push down so secure them

- Install the loading gates, spring pins and corner caps
- Position the platform control box on the front rail.

DO NOT use the machine until all gates and guard rails are in position and properly secured.

#### **Platform Capacity & Material Loading**

#### 


DO NOT exceed the Maximum Platform Capacity, including persons, of 4000 lbs (1814 kg). DO NOT exceed the Maximum Platform Capacity Outside Load Zone of 1000 lbs (454 kg). DO NOT exceed the maximum material load zone capacity of 3000 lbs (1360 kg) located and secured in the load zone only.

The center of mass (CG) of large material must lie within the designated load zone marked on the platform floor.

The TITAN Boom<sup>TM</sup> is equipped with 2 loading gates for the assisted loading of heavy materials.

To load palletized or other large material:

- Remove the single spring pin the holds the loading gate in the closed position.
- Load material onto the platform, taking care to keep the center of mass (CG) in the designated load zone marked on the platform floor.
- Close the loading gate and secure it with the spring pin.
- Secure the load with straps tied to the tie-down points before moving the machine.

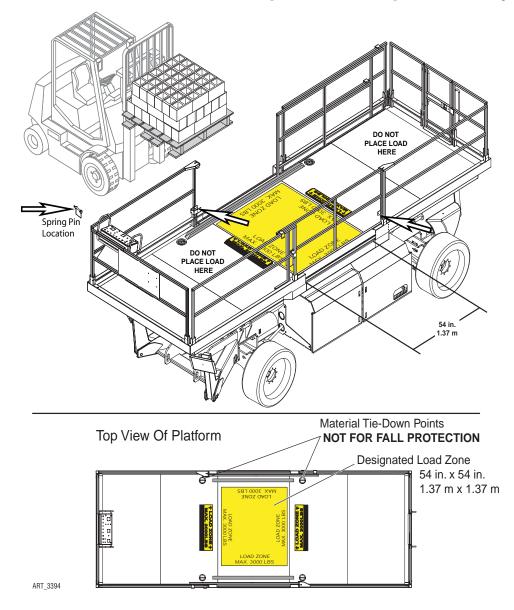



#### **Machine Inspections and Maintenance**

DO NOT operate this machine until you have read and understood this manual, have performed the Workplace Inspection, Pre-Start Inspection and Routine Maintenance, and have completed all the test operations detailed in the Operating Instructions section.

The operator must conduct a Pre-Start Inspection of the machine and test all functions before each work shift to check for damage, malfunction and unauthorized modification.

Tag and remove a damaged, malfunctioning or modified machine from service. DO NOT use a damaged, malfunctioning or modified machine.

Use the Pre-Start Inspection to determine what Routine Maintenance is required. The operator may perform only the routine maintenance items specified in this manual.

**IMPORTANT**— Scheduled maintenance inspection checklists are included in this manual for use only by qualified service technicians. Only qualified service technicians may perform repairs to the machine. After repairs are completed, the operator must perform a Pre-Start Inspection before proceeding to the Functions Test.

🛕 DANGER

Hydraulic fluid under pressure can penetrate and burn skin, damage eyes, and may cause serious injury, blindness, and death. Repair leaks immediately. Fluid leaks under pressure may not always be visible. Check for pin hole leaks with a piece of cardboard, not your hand.

NEVER perform work or inspection on the machine with the platform elevated without first blocking the boom assembly with the Maintenance Chock.

Perform scheduled maintenance at recommended intervals. Failure to perform scheduled maintenance at recommended intervals may result in a defective or malfunctioning machine and may result in injury or death of the operator. Keep maintenance records current and accurate.

Immediately report any damage, defect, unauthorized modification or malfunction to your supervisor. Any defect must be repaired prior to continued use. DO NOT use a damaged, modified or malfunctioning machine.

#### 

Never leave hydraulic components or hoses open. Plug all hoses and fitting immediately after disassembly to protect the system from outside contamination (including rain).

Never open a hydraulic system when there are contaminants in the air.

Always clean the surrounding area before opening hydraulic systems.

Use only recommended lubricants. Improper lubricants or incompatible lubricants may cause as much damage as no lubrication.

Watch for makeshift "fixes" which can jeopardize safety as well as lead to more costly repair.

Inspection and maintenance should be performed by qualified personnel familiar with the equipment.

## **Using The Maintenance Chock**

### 

NEVER perform work or inspection on the machine with the platform elevated without first blocking the boom assembly with the Maintenance Chock.

The Maintenance Chock is heavy. Hold it securely during the installation and removal process. The Maintenance Chock may rotate around the cylinder rod during machine movement and may fall if it is not held securely in place during installation and removal.


The Maintenance Chock fits over the lift cylinder rod, between the rod end and the end of the cylinder barrel.

### Installation

- Remove the Maintenance Chock from the tool storage compartment of the Engine Module (See *Component Locations* on page 12).
- Using the Boom Lift/Lower function, raise the platform to approximately 13 feet (4 m).
- Place the Maintenance Chock over the cylinder rod above the cylinder barrel.
- Using the Boom Lift/Lower function, slowly lower the boom until the Maintenance Chock is secure between the cylinder rod end and the cylinder barrel.

Removal

- Using the Boom Lift/Lower function, raise the platform to approximately 13 feet (4 m) until the Maintenance Chock moves freely.
- Remove the Maintenance Chock from the cylinder rod.
- Store the Maintenance Chock in the tool storage compartment of the Engine Module.

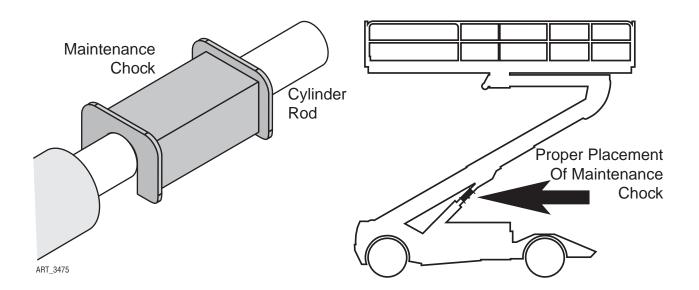

# **Pre-Start Inspection Checklist**

The operator must conduct a Pre-Start Inspection of the machine before each work shift.

DO NOT use a damaged or malfunctioning machine.

Initial	Description
	Check that the operator's manual and manual of responsibilities are in the storage container located on the platform.
	Perform a visual inspection of all machine components. Look for missing parts; torn or loose hoses; hydraulic fluid leaks; loose, torn or disconnected wires; damaged tires; etc.
	Check all structural components of the machine for cracked welds, corrosion and collision damage.
	Check the security and condition of the lanyard attachment cables and end connections. Wire ropes should not have any damage, such as cut or frayed strands.
	Check all hoses and the cables for worn or chafed areas.
	Check the platform rails and sliding mid-rail entry for damage or modification. Check for missing spring pin retainers.
	Check that all warning and instructional decals are legible and secure.
	Check the tires for damage.
	All structural components, pins and fasteners are present and properly tightened.
	Check for fluid leaks.
	Check hydraulic fluid level (check with platform fully lowered and stabilizers fully retracted).
	Check engine oil level.
	Check engine coolant level at overflow bottle.
	Check fuel tank level.
	Secure all covers, panels and guard rails.
	Ensure that all gates are properly closed and secured before operating the machine.

# **Frequent Inspection Checklist**

This checklist must be used at 3-month intervals or every 150 hours of machine use, whichever occurs first. Failure to do so could result in death or serious injury.

Frequent Maintenance Inspections should be conducted by qualified service technicians only. Photocopy this page for reuse. Keep inspections records up to date. Record and report all discrepancies to your supervisor.

Model N	umber Serial Number Hour Meter Reading	
Initial	Description	
	Perform all checks listed on Pre-Start Inspection.	
	Replace engine oil and filter after the first 100 hours of service.	
	See Kubota engine operator's manual for other engine maintenance information.	
	Inspect the condition of hydraulic fluid in the reservoir. Oil should be a clear amber color.	
	Check battery electrolyte level and connections.	
	Check wheel lug nuts for proper torque (see "Machine Specifications").	
	Check if tires are leaning in or out.	
	Inspect all structure and pivot points for signs of wear and/or damage.	
	Check the pin joints and retaining rings for security.	
	Inspect the entire machine for signs of damage, broken welds, loose bolts, improper or makeshift repairs.	
	Check that the platform does not drift down with a full load.	
	Check all wire connections for tightness and corrosion.	
	Check stabilizers for proper operation.	
	Check the operation speeds to ensure they are within specified limits (see Specifications).	
	Check the emergency lowering system.	
	Clean and lubricate all push button switches with dry lubricant and ensure that the switches operate freely in positions.	n all
	Check the tightness of the platform frame and the linkage pins.	
	Check the overall platform and guardrail component security.	
	Check the electrical mounting and hardware connections for security.	
	Check the steering kingpins for excessive play.	

### Additional maintenance requirements for severe conditions

If the machine is used in very dusty, exceptionally hot or exceptionally cold conditions, replace hydraulic filter element (under normal conditions replace every 6 months or 300 hours, whichever comes first).



# **Annual Inspection Report**

				ual Inspect			e	por					
									Date				-
MEC Aerial Platform Sa 1401 S. Madera Avenue • Kerma						~			Serial Number				
						Co	rp		Model Number				—
									Date Of Last Inspection				—
	80	0-3	887-	4575 • 559-842-1500 •	Fax:	559-8	342	-1522	Date Placed In Service				_
Customer					D	ealer							_
Street					St	reet _							_
City/State/Zip City/State/Zip													
Phone Number     Phone Number       Contact     Contact										_			
										-			
						Jinac	۲ <u> </u>						_
Check each item listed bel									Key: 'Y' Yes/Acceptab	le			
Use proper Operator's, Ser									'N'' No/Unaccepta				
If an item is found to be "L	Jnaco	cep	tabl	e" make the necessary re	epairs a	and cl	hec	k the	<b>^</b>	aDIC			
"Repaired" box.									' <b>'</b> R'' Repaired				
When all items are "Accep	table	e", ti	he u	nit is ready for service.					'U'' Unnecessary/	Not A	<b>Appl</b>	ical	)k
	Y	Ν	R	U		Y	Ν	RU		Y	N	R	τ
Decals:	Ť		<u> </u>	Base:					Operation:	T			Ť
Proper Placement/Quantity	1			Cover Panels Secure					Wires Tight				t
Legibility	1			Base Fasteners Tight					Switches Secure				t
Correct Capacity Noted	1	1		Bolts Tight					All Functions Operational				t
Rails:				Front Axle Mounting (4W	D)				Emergency Down:				t
All Rail Fasteners Secure				Rear Axle Mounting (4WD	))				Operational				t
Entry Gate Closes Properly				Front Axle/Front Wheel Asse	mblies:				Slow Speed Limit Switch:				t
Manual/Safety Data In Box				Wheel Motors-Mounting	Secure				Set Properly				t
Platform:				Wheel Motors-Leaks					Limit Switches Adjusted				t
Platform Bolts Tight				Lug Nuts Torqued Proper	ly				Pressures & Hydraulics:				t
Platform Structure				Steering Cylinder Pins See	cure				Oil Filter Secure/Chg				
Wire Rope for Lanyards				Pivot Points Lubed					Oil Level Correct/Chg				
Tight and Undamaged				Wheel Assemblies:					Steering Pressure Set				
All Decals Present And Legible				Brakes Operational					Drive Pressure Set				
Load Zone Instructions Present				Wheel Motors-Mounting	Secure				Lift Pressure Set				
Wire Hamesses:				Wheel Motors-Leaks					Engine:				
Mounted Correctly				Lug Nuts Torqued Proper	ly				Engine Mounts Tight				
Physical Appearance				Axle Lock Operational					Fuel Lines Secure				
110/220V Outlet Safe/Working									Fuel Lines Free Of Leaks				
Elevating Assembly:				Component Area:					Fuel Tanks Secure				
Boom Structures				Valve Manifold(s) Secure					Fuel Shut Off Valves Func.				
Welds				Hoses Tight/No Leaks					All Shields/Guards In Place				1
Retaining Rings	_			D/C Mtr(s) Secure/Operat	ional				Oil Level	_			+
Cylinder Pins Secure	_			Contactors Secure					Oil Filter	_			+
Boom/Carriage Shimming	_		<u> </u>	Pump Secure		_			Air Filter	_	-		╞
Torque on Slew Ring Bolts	_		-	Batteries:					Maintenance Chock Present	_	-		╞
Transport Locks:			-	Secure			-		Operator's Manual Present:	+	-		+
Secure Operational	+			Fully Charged			-	$\left  \right $	Manual Of Responsibilities Present:	+	-		+
Stabilizers Operating Correctly	+	-	-	Emergency Stop:		_	-	$\left  \right $		+	-		+
stabilizers Operating Correctly				Breaks All Circuits						+			┢
	+									+	1		+
													t
			-			_				_			$\downarrow$
													L
nments:													
													—
				Signatur	e/Mech	anic			Date:				_



# Maintenance

DO NOT operate this machine until you have read and understood this manual, have performed the Workplace Inspection, Pre-Start Inspection and Routine Maintenance, and have completed all the test operations detailed in the Operating Instructions section.

Tag and remove a damaged, malfunctioning or modified machine from service. DO NOT use a damaged, malfunctioning or modified machine.

Use the Pre-Start Inspection to determine what Routine Maintenance is required. The operator may perform only the routine maintenance items specified in this manual.

IMPORTANT—Scheduled maintenance inspection checklists are included in this manual for use only by qualified service technicians. Only qualified service technicians may perform repairs to the machine. After repairs are completed, the operator must perform a Pre-Start Inspection before proceeding to the Functions Test.

 $^{\prime}$ Hydraulic fluid under pressure can penetrate and burn skin, damage eyes, and may c

Hydraulic fluid under pressure can penetrate and burn skin, damage eyes, and may cause serious injury, blindness, and death. Repair leaks immediately. Fluid leaks under pressure may not always be visible. Check for pin hole leaks with a piece of cardboard, not your hand.

#### 

NEVER perform work or inspection on the machine with the platform elevated without first blocking the boom assembly with the Maintenance Chock.

Failure to perform scheduled maintenance at recommended intervals may result in injury or death. Keep maintenance records current and accurate.

Immediately report any damage, defect, unauthorized modification or malfunction to your supervisor. Any defect must be repaired prior to continued use. DO NOT use a damaged, modified or malfunctioning machine.

#### 

Never leave hydraulic components or hoses open. Plug all hoses and fitting immediately after disassembly to protect the system from outside contamination (including rain).

Never open a hydraulic system when there are contaminants in the air.

Always clean the surrounding area before opening hydraulic systems.

Use only recommended lubricants. Improper lubricants or incompatible lubricants may cause as much damage as no lubrication.

Watch for makeshift "fixes" which can jeopardize safety as well as lead to more costly repair.

Inspection and maintenance should be performed by qualified personnel familiar with the equipment.

### **Routine Maintenance**

**IMPORTANT**— The operator may perform only maintenance items on the Pre-Start Inspection Checklist. Frequent and Annual maintenance must be performed by qualified service technicians.

**Pre-Start Inspection** Perform routine maintenance as identified in the *Pre-Start Inspection Checklist* on page 36.


### **Frequent and Annual Maintenance**

Frequent Inspection Checklists and Annual Inspection Reports must be completed by qualified service technicians trained and authorized to perform maintenance on this machine, and must be done in accordance with the procedures outlined in the service manual. Scheduled maintenance inspection checklists are included in this manual for use by qualified service technicians.

Machines that have been out of service for more than three months must have the Frequent Inspection Checklists completed before returning to service.

# Lubrication

Operator may perform routine maintenance only. Lubrication listed as Scheduled Maintenance must be performed by a qualified service technician.

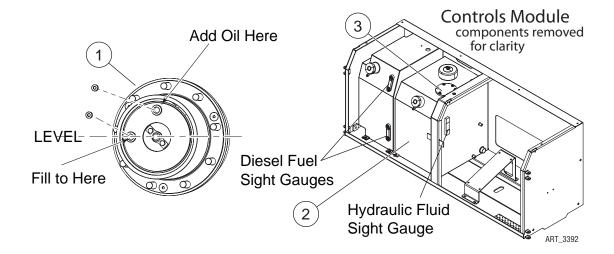

### Lubrication

No.	ITEM	SPECIFICATION	FREQUENCY
1	Hubs	SAE 90 Multipurpose Hypoid Gear Oil API Service Classification GL5	Scheduled Maintenance Check every three months or 150 hours, whichever occurs first Change yearly or every 600 hours, whichever occurs first
2	Hydraulic Reservoir	Fluid TypeTemperature RMobile 424 $> 30^\circ$ F (0° C)Mobile DTE13M0° F (-18° C) ~Mobile DTE11M $< 0^\circ$ F (-18° C)Do not substitute other fluids as pump or result.Fill to the middle of the sight gauge with plastowed position and stabilizers retracted.	30° F (0° C)       Check level daily         30° F (0° C)       Scheduled Maintenance         Change yearly or every 600 hours, whichever occurs first         damage may
3	Hydraulic Filter	Filter Element (located inside Hydraulic Reservoir)	Scheduled Maintenance Normal Conditions Change every six months or 300 hours, whichever occurs first Severe Conditionsvery dusty, exceptionally hot or exceptionally cold conditions Change every three months or 150 hours, whichever occurs first

# Troubleshooting


#### 

Should you experience erratic operation or notice any malfunction while operating this machine, discontinue use immediately.

Call for assistance and report the incident to your supervisor, and do not use the machine until it has been checked by a trained, qualified mechanic.

### Machine functions will not operate

### Lower Controls

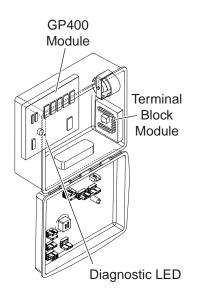

- Master disconnect turned on?
- Battery properly connected?
- Battery fully charged?
- Circuit Breaker tripped?
- Function toggle switch or the Enable Switch not activated?
- Selector Key Switch in proper position?
- Both Emergency Stop Switches reset?
- Hydraulic fluid level low?
- Obvious fluid leak or damaged component?
- Wires disconnected, broken, or loose?
- Motor control processor Diagnostic LED OFF? LED should be ON. If not ON or FLASHING, refer to Service Manual or contact MEC Technical Support.

ART\_3093


### TITAN Boom<sup>™</sup> 40-S

# Warning and Instructional Decals

27 (26) 11 use stencil 30 to paint--4 places metal plate (31) on pallet stops--2 places Platform removed 11 (32) inside control box 5 6 12 (6a Inside box 10 2 9 (35) 8) both sides of gate (25) inside of gate only (36 (14) (15) both sides ( of platform (2) (14) both sides of gate (8) inside of gate only (25) (15) (13) (28 (23) 29 9 (26) 1 (27 both sides 22 of cylinder ) inside module (and the second (24) (17 (20) (23) between 6 4 tie-down straps 19 (21 3 4 3 33 1 (16) O) (34 33 21 18 ILLUSTRATION No (20 (16V) ART\_3390

All warning and instructional decals must be present, legible and secure.


### **Decals** (continued)

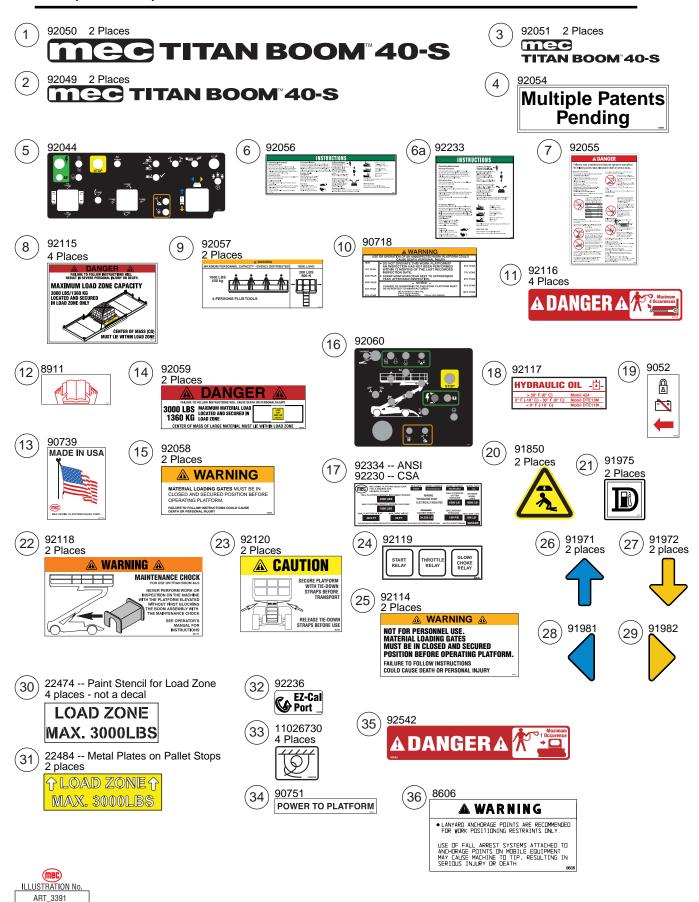



### **Serial Plate Location**

The serial plate is attached to the machine at the time of manufacture. Important information about the machine is recorded on the serial plate.

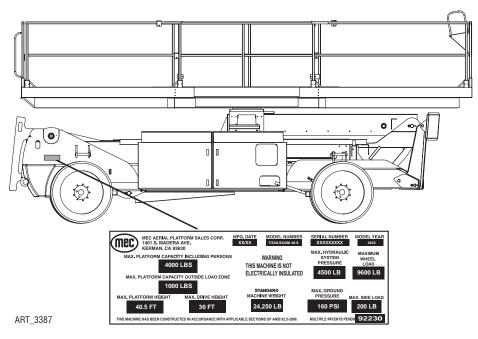

### **Serial Plate Description**

MFG DATE. Month / Year of manufacture

MODEL NUMBER. Identifies the machine.

**SERIAL NUMBER.** Identifies a machine with reference to its original owner. Refer to the number when requesting information or ordering parts.

**MAX. PLATFORM CAPACITY INCLUDING PERSONS.** The maximum safe load (material, persons + equipment) which can be correctly placed on the platform at any elevation.

MAX. PLATFORM CAPACITY OUTSIDE LOAD ZONE. The maximum safe load (persons + equipment) which can be evenly distributed outside the load zone of the platform at any elevation.

MAX. SIDE LOAD. The maximum safe force that the occupant can exert laterally on an object outside the platform.

MAX. PLATFORM HEIGHT. The maximum attainable height measured from level ground surface to platform floor.

**MAX. DRIVE HEIGHT.** The maximum safe platform height at which the machine can be driven.

MAX. WHEEL LOAD. The maximum safe weight applied to each wheel. Calculated with all available options installed.

Fw = 30% (Wm + Wc + Wopt)

MAX. GROUND PRESSURE. The amount of pressure exerted on the surface at each wheel. Calculated with all available options installed.

Pmax = 30% (Wm + Wc + Wopt) / Contact Area

STANDARD MACHINE WEIGHT. The weight of the machine with no options.

**OPTIONAL EQUIPMENT ADDS TO STANDARD MACHINE WEIGHT.** The weight of installed optional equipment.

# Transport and Lifting Instructions

### Safety Information

### WARNING

This section is provided for reference and does not supersede any government or company policy regarding the loading, transport or lifting of MEC machinery.

Truck drivers are responsible for loading and securing machines, and should be properly trained and authorized to operate MEC machinery. Drivers are also responsible for selecting the correct and appropriate trailer according to government regulations and company policy. Drivers must ensure that the vehicle and chains are strong enough to hold the weight of the machine (see the serial number plate for machine weight).

# Loading


### Free-wheel configuration for Winching or Towing.

### DANGER

### **RUNAWAY HAZARD!**

After releasing the brakes there is nothing to stop machine travel. Machine will roll freely on slopes. ALWAYS chock the wheels before manually releasing the brakes.

> The machine can be winched or towed short distances at speeds not to exceed 5 MPH (8 km/h). Before towing or winching the machine, it is necessary to release the brakes. Reset the brakes after towing or winching.

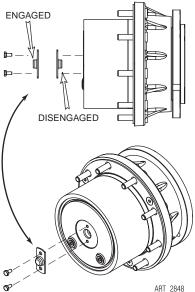

Disengage Brakes before Towing or Winching

- Chock the wheels.
- Remove the Torque Engage Cap and reinstall with the bump facing inward on all four (4) hubs.

# **Engage Brakes before Driving**


• Remove the Torque Engage Cap and reinstall with the bump facing outward on all four (4) hubs.

# Driving or Winching onto or off of a Transport Vehicle

### WARNING

Always attach the machine to a winch when loading or unloading from a truck or trailer by driving. Read and understand all safety, control, and operating information found on the machine and in this manual before operating the machine.

- Attach the machine to a winch.
- Remove all machine tie downs. Remove wheel chocks.

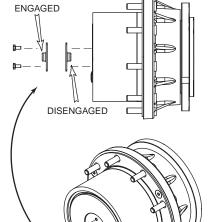



#### Driving

- Turn the Base Key Switch to PLATFORM. Check that the Emergency Stop Switch is reset by turning it clockwise.
- Enter the platform and reset the Platform Emergency Stop Switch.
- Test platform control functions.
- Carefully drive the machine off the transport vehicle with the winch attached.
  - **Note:** The brakes are automatically released for driving and will automatically apply when the machine stops.

#### Winching


- Disengage brakes (see Disengage Brakes before Towing or Winching on page 46).
- Carefully operate the winch to lower the machine down the ramp.
- Chock the wheels and engage the brakes.

### Securing to Truck or Trailer for Transport

- Turn the key Selector Key Switch to OFF and remove the key before transport.
- Turn the Battery Disconnect Switch to OFF before transport.
- Inspect the entire machine for loose or unsecured items.
- Use the ratcheting tie-down straps mounted in front of the entry ladder to secure the rear of the deck to the chassis. Attach each strap to the tie-down points on the bottom of the platform corners (see illustration).

Note: Release the ratcheting tie-down straps from platform before use


- Use a minimum of two (2) chains or straps of adequate load capacity.
- Adjust the rigging to prevent damage to chains or the machine.

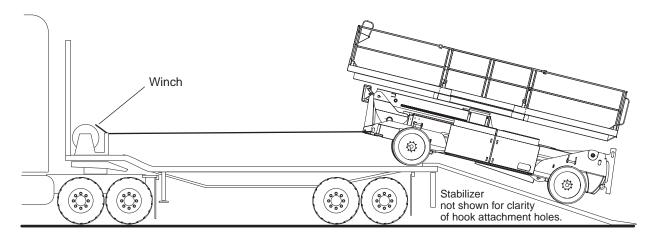

#### **Platform Tie Down Straps**



**Truck Tie Down** 

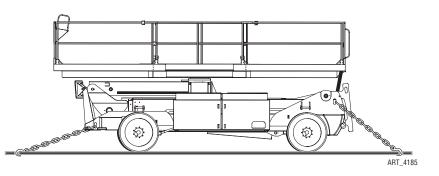




# **Lifting Instructions**

### 


Only qualified riggers should rig and lift the machine.

Ensure that the crane capacity, loading surfaces and straps are sufficient to withstand the machine weight. See the serial plate for the machine weight.


- 1 Begin with the platform fully lowered and retracted. Be sure that the module doors are closed and secure. Remove all loose items from the machine.
- 2 Secure the Material Loading Gates and the Personnel Entry Gate in open positions.

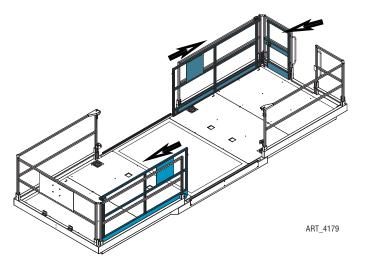

3 Use the Platform Slide function to slide the platform forward approximately 18 inches (46 cm). Use the ratcheting tie-down straps to secure the corners of the platform.

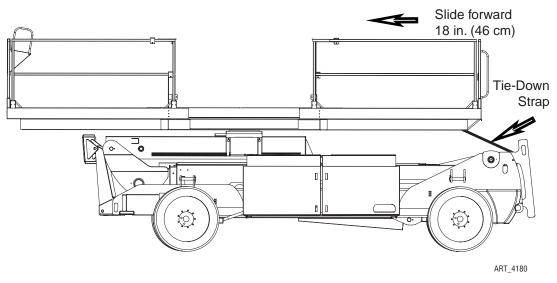


- 4 Locate the lift points.
  - Front lift points are located in the front axle.
  - Rear lift points are at the rear of the machine chassis.

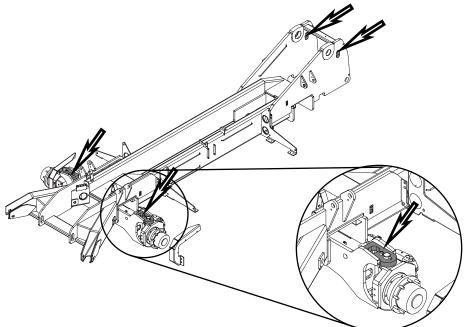


Components removed for clarity


ART\_4181

5 Locate the machine's center of gravity.

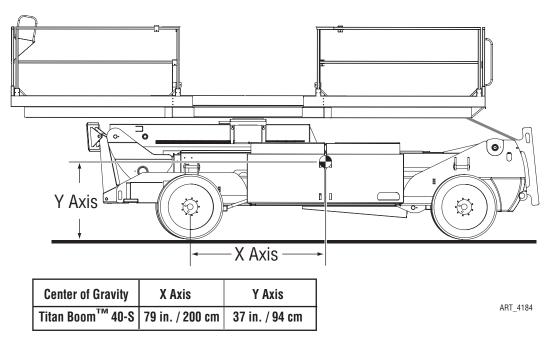

6 Attach lifting straps, chains or cables of adequate capacity to the lifting points previously designated. Route through the open gates as shown.

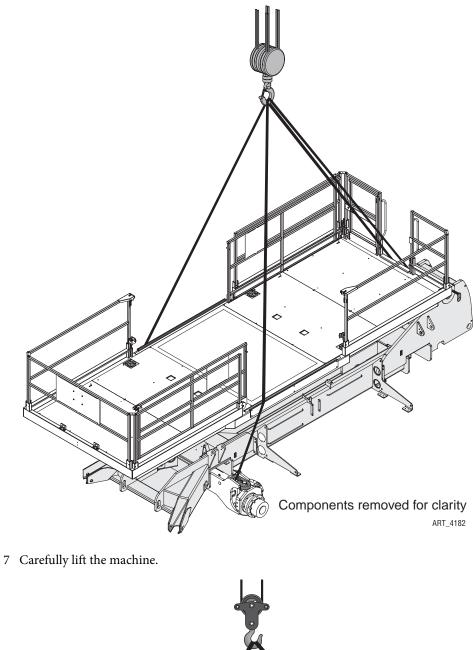

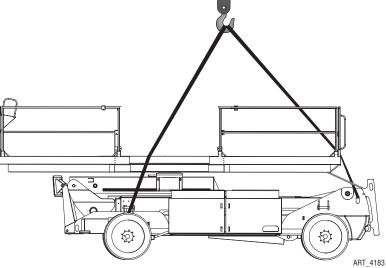

NOTES:



NOTES:



# (Mec)

# **Limited Owner Warranty**

MEC Aerial Platform Sales Corp. warrants its equipment to the original purchaser against defects in material and/or workmanship under normal use and service for one (1) year from date of registered sale or date the unit left the factory if not registered. MEC Aerial Platform Sales Corp. further warrants the structural weldments of the main frame and scissor arms to be free from defects in material or workmanship for five (5) years from date of registered sale or date unit left the factory if not registered. Excluded from such warranty is the battery(s) which carries a ninety (90) day warranty from described purchase date. Warranty claims within such warranty period shall be limited to repair or replacement, MEC Aerial Platform Sales Corp's option, of the defective part in question and labor to perform the necessary repair or replacement based on MEC Aerial Platform Sales Corp's then current flat rate, provided the defective part in question is shipped prepaid to MEC Aerial Platform Sales Corp. and is found upon inspection by MEC Aerial Platform Sales Corp. to be defective in material and/or workmanship. MEC Aerial Platform Sales Corp. shall not be liable for any consequential, incidental or contingent damages whatsoever. Use of other than factory authorized parts; misuse, improper maintenance, or modification of the equipment voids this warranty. The foregoing warranty is exclusive and in lieu of all other warranties, express or implied. All such other warranties, including implied warranties of merchantability and of fitness for a particular purpose, are hereby excluded. No Dealer, Sales Representative, or other person purporting to act on behalf of MEC Aerial Platform Sales Corp. is authorized to alter the terms of this warranty, or in any manner assume on behalf of MEC Aerial Platform Sales Corp. any liability or obligation which exceeds MEC Aerial Platform Sales Corp's obligations under this warranty.



# **MEC Aerial Platform Sales Corp.**

1401 South Madera Ave • Kerman, CA 93630 USA Ph: 1-877-632-5438 • 559-842-1500 • Fax: 559-842-1522 www.mecawp.com